

1	125F0001	Culasse
2	125F0033	Joint
3	125F0003	Plaque support
4	125F0034	Joint
5	125F0006	Lamme
6	125F0086	Vis
7	125F0114	Rondelle
8	125F0012	Raccord coudé
9	125F0186	Tuyau
10	125F0015	Filtre à air complet
11	125F0016	Elément filtrant
12	125F0035	Joint
13	125F0018	Cylindre
14	125F0105	Ecrou
15	125F0115	Rondelle
16	125F0096	Tige filetée
17	125F0036	Joint
18	125F0027	Segment de compr.
19	125F0029	Segment racleur
20	125F0022	Piston
21	125F0024	Goupille
22	125F0025	Circlips
23	125F0057	Carter
24	125F0037	Joint
25	125F0061	Vilebrequin
26	125F0065	Capot
27	125F0069	Bielle
28	125F0074	Bulle niveau d'huile
29	125F0097	Vis de vidange
30	125F0153	Cache
31	125F0087	Vis
32	125F0166	Câble électrique
33	125F0076	Bouchon
34	125F0103	Vis
35	125F0053	Moteur
36	125F0040	Joint
37	125F0240	Vis
38	125F0151	Hélice
39	125F0164	Câble électrique
40	125F0128	Barre
41	125F0171	Ressort
42	125F0109	Rondelle
43	125F0102	Vis
44	125F0144	Pressostat
45	125F0127	Axe
46	125F0130	Soupape de sécu.
47	125F0167	Press-étoup
48	125F0100	Bouchon 1/4"
49	125F0159	Embout plastique
50	125F0191	Poignée caoutch.
51	125F0190	Poignée caoutch.
52	125F0288	Vis
53	125F0175	Poignée
54	125F0121	Cuve 20l
55	121644	Raccord pneum.
56	125F0139	Manomètre
57	125F0009	Raccord coudé
58	125F0136	Régulateur de pres.
59	125F0050	Tuyau
60	125F0083	Vis
61	125F0124	Roue
62	125F0080	Vis
63	125F0174	Panneau de ctrl.
64	125F0098	Bouchon
65	125F0046	Tuyau
66	125F0007	Raccord coudé
67	125F0131	Clapet anti-retour
68	125F0145	Robinet de purge
69	125F0155	Pied
70	125F0172	Support moteur
71	125F0176	Support enrouleur
72	125F0286	Commutateur centr.
73	125F0214	Disj. Thermique 9A
74	125F0215	Condensateur 75µF
75	125F0216	Condensateur 8µF
76	125F0256	Couvercle

