



		ENG	FR	DE			ENG	FR	DE
1	125F0086	In six-angle bolt	Vis	Schraube	38	125F0144	Pressure switch	Pressostat	Druckschalter
2	125F0114	Spring washer	Rondelle	Scheibe	39	125F0330	Safety valve	Soupape de sécurité	Sicherheitsventil
3	125F0001	Cylinder head	Culasse	Zylinderkopf	40	125F0009	Elbow	Raccord	Kupplung
4	125F0012	Exhaust elbow	Raccord	Kupplung	41	125F0100	Plug	Bouchon	Stecker
5	125F0195	Exhaust tube ass'y	Tuyau	Schlauch	42	125F0131	Check valve	Clapet anti-retour	Ventil
6	125F0014	Three way	Raccord	Kupplung	43	125F0352	Unloading tube	Tuyau	Schlauch
7	125F0348	Air filter	Filtre à air complet	Luffilter Kpl	44	125F0007	Unloading elbow	Raccord	Kupplung
8	125F0313	Air filter(element only)	Élément filtrant	Luffilter	45	125F0139	Pressure gauge	Manomètre	Manometer
9	125F0315	Cylinder head packing	Joint	Dichtung	46	125F0353	Control panel	Panneau de ctrl	Tafel
10	125F0316	Inlet valve seat	Plaque	Platte	47	125F0102	Round-head bolt	Vis	Schraube
11	125F0317	Inlet & Exhaust valve seat packing	Joint	Dichtung	48	125F0136	Regulator valve	Régulateur de pression	Druckminderer
12	125F0318	Exhaust valve seat	Plaque	Platte	49	121644	Quick coupler	Raccord	Kupplung
13	125F0319	Valve seat packing	Joint	Dichtung	50	125F0354	Air tank	Cuve	Luftbehälter
14	125F0020	Cylinder	Cylindre	Zylinder	51	125F0334	Plate washer	Rondelle	Scheibe
15	125F0091	Round-head bolt	Vis	Schraube	52	125F0333	Tank foot assembly	Patin	Tankfuss
16	125F0291	Ring press plate	Bague	Ringplatte	53	125F0081	Out six-angle bolt	Vis	Schraube
17	125F0031	Piston ring plate	Segment	Kolbenring	54	125F0145	Drain cock	Robinet de purge	Ablassventil
18	125F0197	Piston rod	Bielle	Kolben	55	125F0124	Wheel	Roue	Rad
19	125F0087	Six-head bolt	Vis	Schraube	56	125F0083	Tank wheel bolt	Vis	Schraube
20	125F0116	Spring washer	Rondelle	Scheibe	57	125F0084	Out six-angle bolt	Vis	Schraube
21	125F0110	Plate washer	Rondelle	Scheibe	58	125F0355	handle	Poignée	Griff
22	125F0150	Fan	Hélice	Fan	59	125F0191	Rubber handle(1")	Poignée caoutchouc	Griff
23	125F0085	In six-angle bolt	vis	Schraube	60	125F0350	Unloading tube	Tuyau	Schlauch
24	125F0104	Nut	Ecrou	Mutter	61	125F0342	Centrifugal Switch	Commutateur centrifuge	Fliehkraftschalter
25	125F0289	Bearing	Roulement à bille	Kugellager	62	125F0357	Overload Switch	Disjoncteur thermique	Sicherungsschalter
26	125F0194	Crankshaft	Vilebrequin	Kurbelwelle	63	125F0219	Start Capacitor	Condensateur	Kondensator
27	125F0349	Exhaust tube set	Tuyau	Schlauch	64	125F0358	Run Capacitor	Condensateur	Kondensator
28	125F0166	Cable wire	Câble électrique	Elektrisches Kabel	65	125F0337	Bushing	Réducteur	Zwischenteil
29	125F0336	Power wire	Câble d'alimentation	Kabel	66	125F0338	Nipple	Réducteur	Zwischenteil
30	125F0187	Plastic front cover	Capot	Deckel	67	125F0335	Elbow	Raccord	Kupplung
31	125F0082	Out six-angle bolt	Vis	Schraube	68	125F0343	Pin	Goupille	Stift
32	125F0111	Plate washer	Rondelle	Scheibe	69	125F0344	Inlet & Exhaust spring plate	Plaque ressort	Federplatte
33	125F0340	Crankcase	Carter	Kurbelgehäuse	70	125F0345	Inlet & Exhaust valve plate	Lamelle	Platte
34	125F0350	Motor	Moteur	Motor	71	125F0359	Plug	Bouchon	Stecker
35	125F0351	Crankcase	Carter	Kurbelgehäuse	72	125F0360	Capacitor cover(with punched)	Couvercle	Deckel
36	125F0167	Strain relief clip	Press etoup	Kabelklammer	73	125F0361	Capacitor cover	Couvercle	Deckel
37	125F0095	Flange cross bolt	Vis	Schraube					